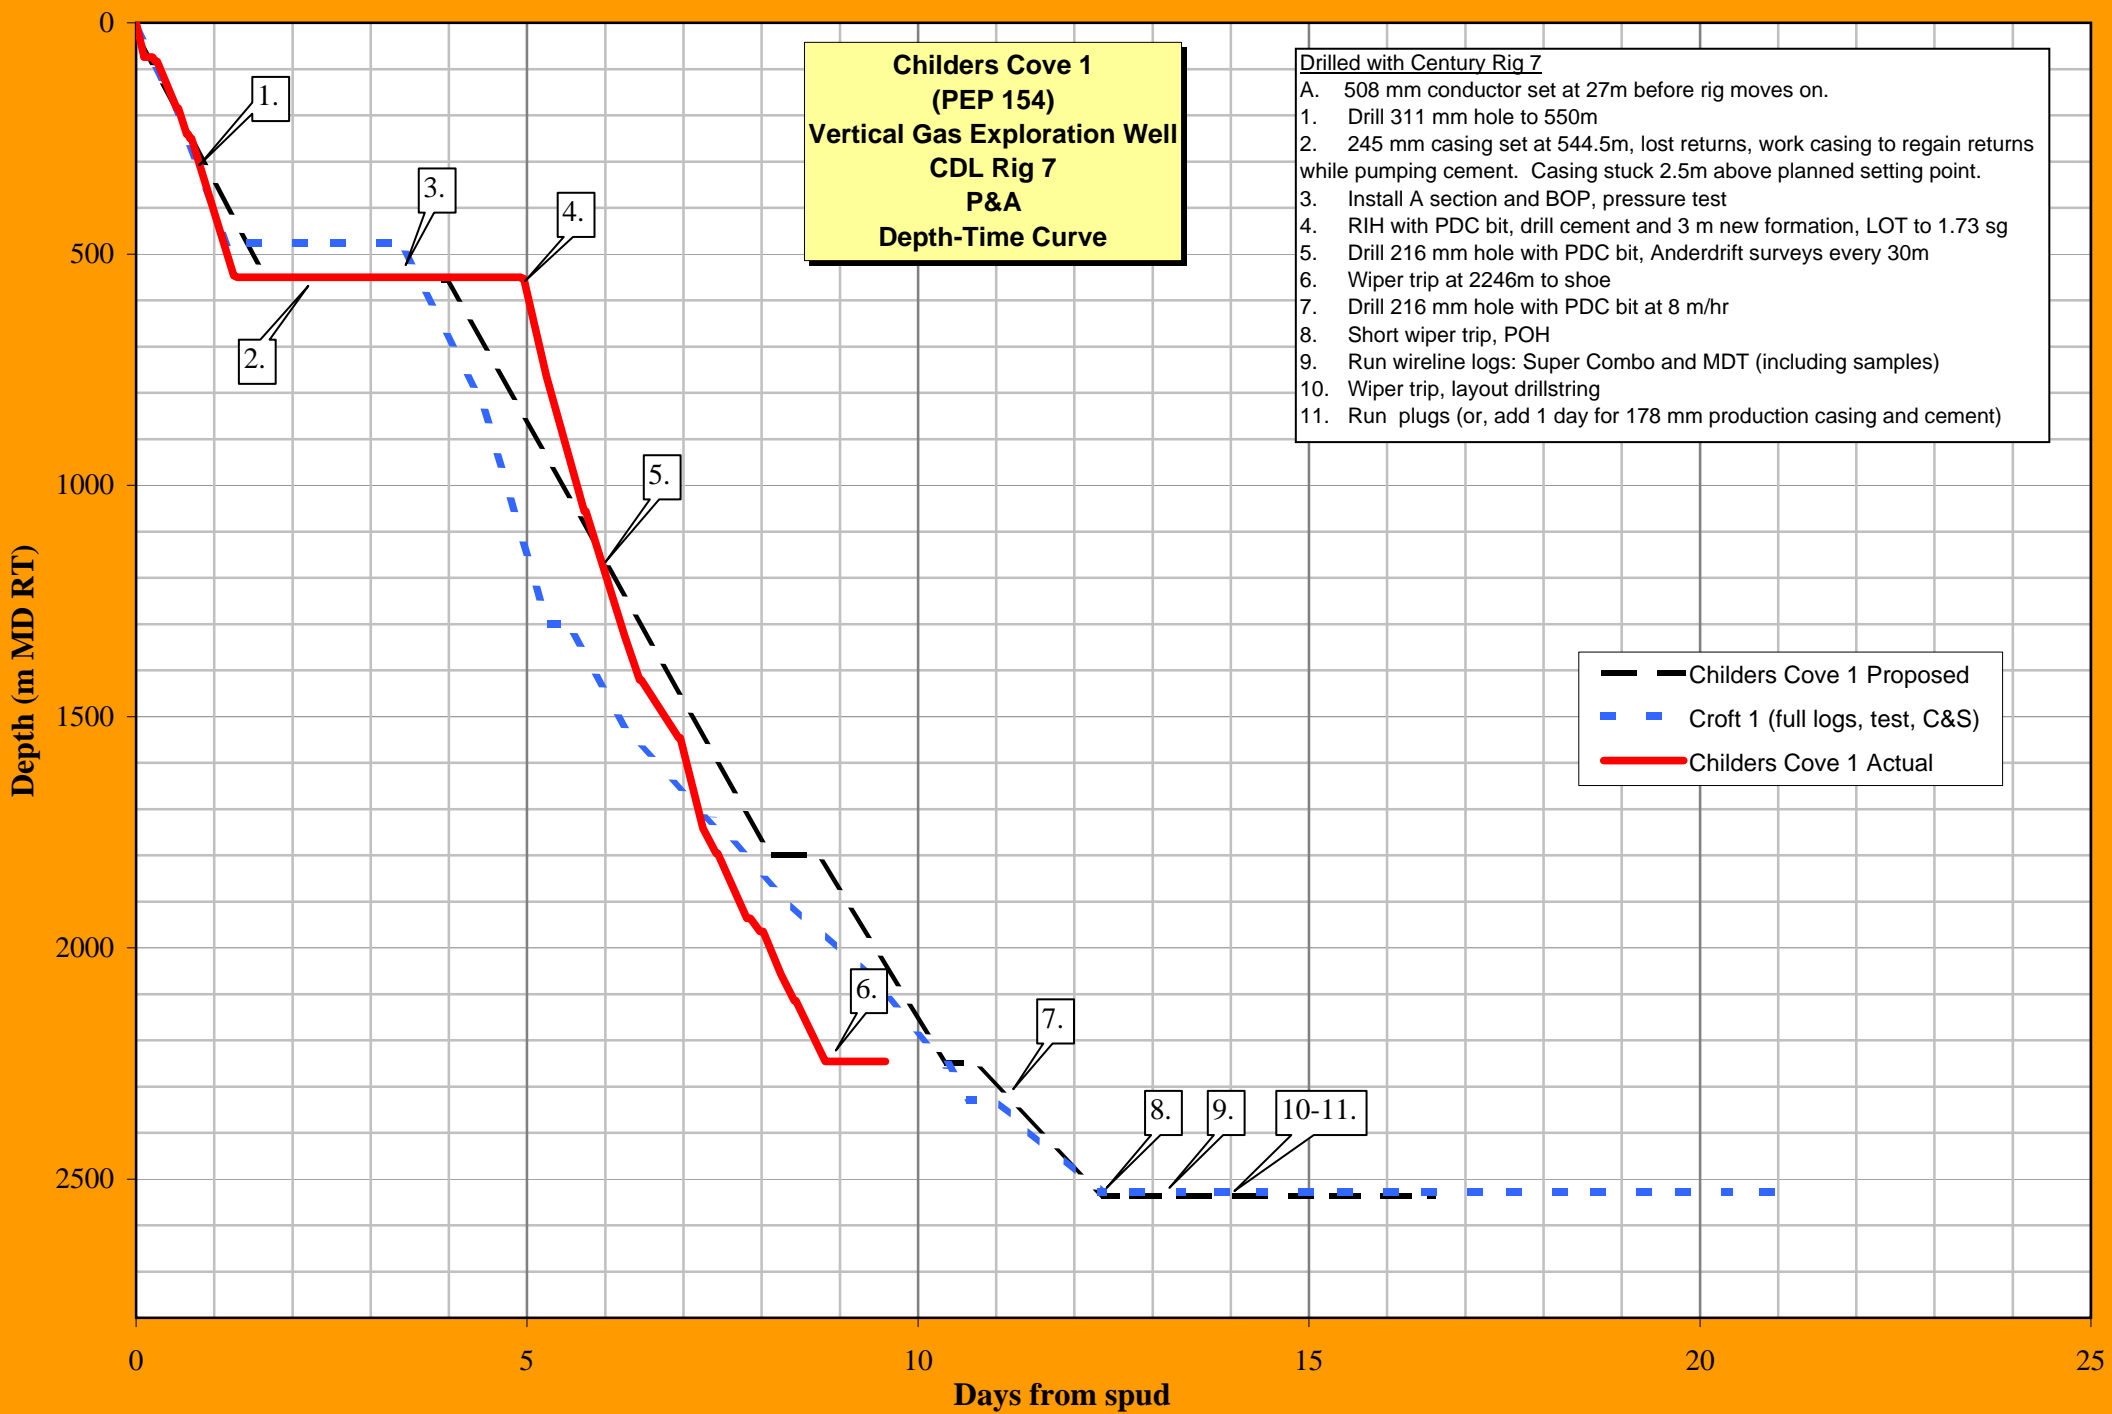


**Childers Cove 1  
(PEP 154)  
Vertical Gas Exploration Well  
CDL Rig 7  
P&A  
Depth-Time Curve**

- Drilled with Century Rig 7**
- A. 508 mm conductor set at 27m before rig moves on.
  - 1. Drill 311 mm hole to 550m
  - 2. 245 mm casing set at 544.5m, lost returns, work casing to regain returns while pumping cement. Casing stuck 2.5m above planned setting point.
  - 3. Install A section and BOP, pressure test
  - 4. RIH with PDC bit, drill cement and 3 m new formation, LOT to 1.73 sg
  - 5. Drill 216 mm hole with PDC bit, Anderdrift surveys every 30m
  - 6. Wiper trip at 2246m to shoe
  - 7. Drill 216 mm hole with PDC bit at 8 m/hr
  - 8. Short wiper trip, POH
  - 9. Run wireline logs: Super Combo and MDT (including samples)
  - 10. Wiper trip, layout drillstring
  - 11. Run plugs (or, add 1 day for 178 mm production casing and cement)



**FIGURE 4**